




U imp 6 kV Ie 20 A Iq 3 kA

Max. zul. Motorleistung / Max. Motor Performance / Max. Potencia admisible del Motor / Puissance max. du Moteur / Pot. max. ammissibile dei motori

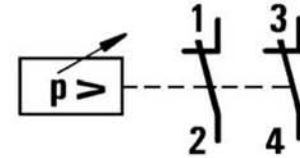


	EN 60947 – 4 - 1
50.. ..60 Hz	1~
120 V AC3	2 kW
250 V AC3	4 kW

	UL 508 / CSA 22.2 / No, 14	
VAC	FLA	LRA
120 V / 50 Hz	26	156
240 V / 60 Hz	26	156

DRAUFSICHT / TOP VIEW / VISTA SUPERIOR / VUE SUPERIEURE / VISTA DALL'ALTO
SCHALTBILD / WIRING DIAGRAM / ESQUEMA DE CONEXION /
SCHEMA DE RACCORDEMENT / SCHEMA ELETTRICO

Druckdifferenz optional
Pressure differential optional
Diferencial de presión opcional
Differential de pression optionelle
Pressione differenziale opzionale

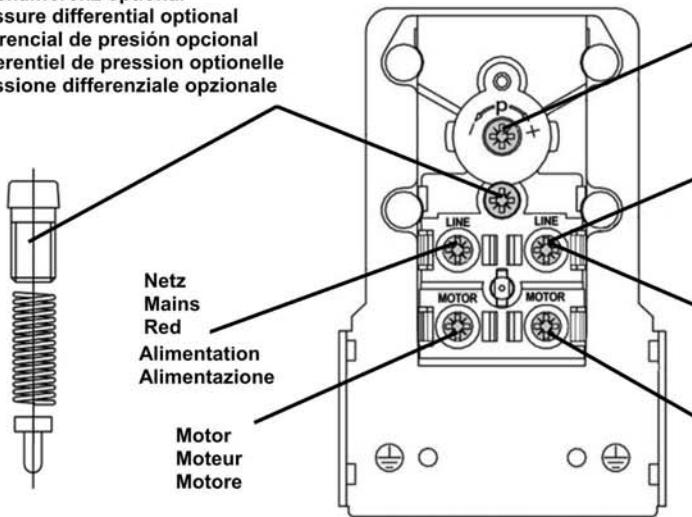

Einschaltdruck
Cut-in pressure
Presión de disparo inferior
Pression de d'enclenchement
Pressione di attacco



1.8 Nm
Drehmoment
Tightening torque
Par de giro
Couple
Momento torcente

Netz
Mains
Red
Alimentation
Alimentazione

Motor
Moteur
Motore





DRUCKDIAGRAMME / PRESSURE DIAGRAMS / DIAGRAMAS DE REGULACION /
DIAGRAMMES DE REGLAGE / DIAGRAMMI TARATURE

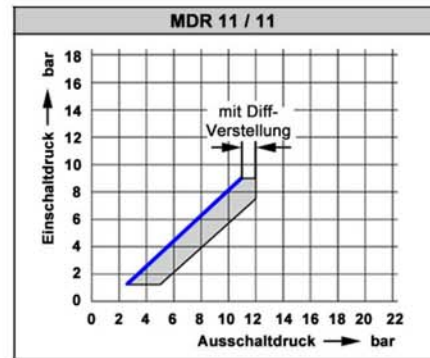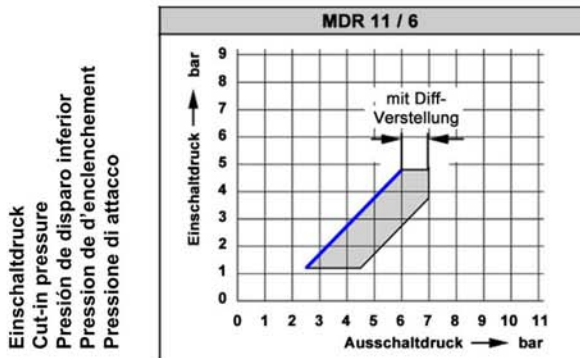

Einschaltdruck
Cut-in pressure
Presión de disparo inferior
Pression de d'enclenchement
Pressione di attacco

Ausschaltdruck po (bar)
Cut-out pressure
Presión de disparo superior
Pression déclenchement
Pressione di distacco

Einschaltdruck
 Cut-in pressure
 Presión de disparo inferior
 Pression de d'enclenchement
 Pressione di attacco

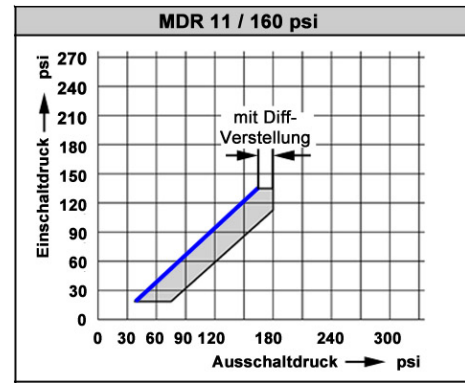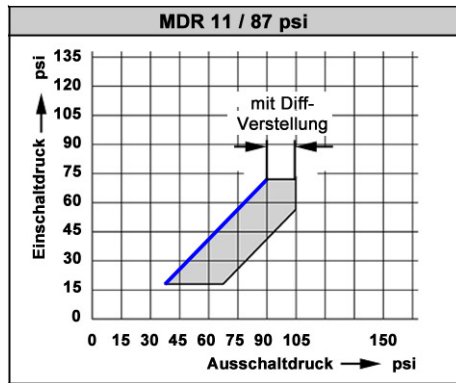

Ausschaltdruck po (psi)
 Cut-out pressure
 Presión de disparo superior
 Pression déclenchement
 Pressione di distacco

1 bar = 14,5 psi
 10 psi = ca. 0,7 bar

Einbau und Anschluß nur durch Fachkraft; nach Anbringung von Zubehör Funktionsüberprüfung durch Elektrofachkraft erforderlich
 Installation and assembly of electrical equipment shall be carried out by qualified personnel only
 Instalación y ensamblaje de equipos eléctricos deberán ser efectuados solamente por personal cualificado
 L'installation et raccordement des appareils doit être effectué par du personnel qualifié
 L'installazione e l'assemblaggio delle parti elettriche vanno eseguite esclusivamente da personale qualificato

APPROBATIONEN / APPROVALS / APROBACIONES / APPROBATIONS / APPROVAZIONI




100% Einschaltdauer (uninterrupted duty)
 Kurzschlußeinrichtung / Short-circuit protection / Protección contra corto circuito
 Protection contre court-circuit/ Protezione contro corto circuito

Type	Koordination Type " 1 "		Koordination Type " 2 "	
Tipo	Co-ordination Type " 1 "		Co-ordination Type " 2 "	
	Coordinación Tipo " 1 "		Coordinación Tipo " 2 "	
	Coordination Type " 1 "		Coordination Type " 2 "	
	Coordinamento Tipo " 1 "		Coordinamento Tipo " 2 "	
Sicherung gL	manuell	pneumatisch	manuell	pneumatisch
Fuse (slow)				
Fusible (retardado)			35A	50A
Fusible (retardé)				
Fusibile (ritardato)				

IP 44 / IP 41

Einbaulage berücksichtigen / Mounting position must be observed / Respetar posición de montaje
Observer position de montage / Rispettare posizione montaggio

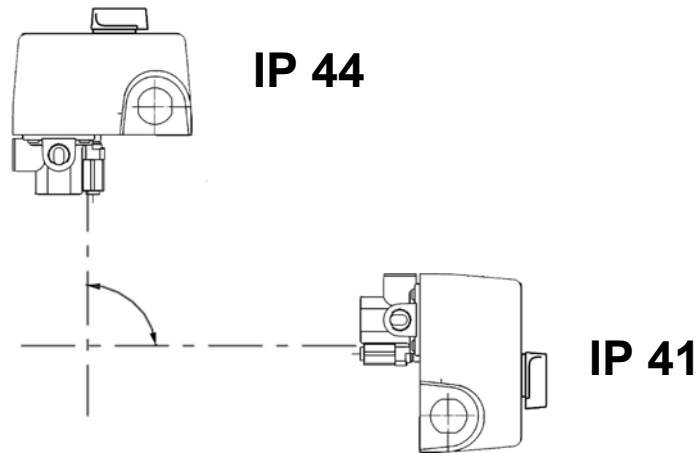

0.0800.0372 27.06.2011



Condor Pressure Control GmbH

Warendorfer Straße 47 – 51
D-59320 Ennigerloh

Telefon: +49 (0) 25 87 / 89 – 0
Telefax: +49 (0) 25 87 / 89 - 140

info@condor-cpc.com
www.condor-cpc.com